



EC1 Echo/Reverberation Roger Beep Box Operation Manual



1. Left Knob ON/OFF Switch.

When turned on, the ECHO ON LED will light up. Turning this knob clockwise will control Echo levels.

2. 4 pin microphone MIC IN jack

3. Right Knob controls delay time.

4. 12VDC power input.

5. Audio output 4 pin cable plug. Plugs into CB radio microphone jack.

6. Roger Beep ON/OFF switch